

Putter Cover Size And Care Guide

Our covers fit both left and right handed putters all with magnetic closures.

Mini blade – To fit traditional ‘blades’ up to 1” deep from face to back and 4” from heel to toe.

Standard blade – To fit putters up to 1.5” deep from face to back and 5” long from heel to toe.

Midsize blade - To fit putters up to 2” deep from face to back and 5” long from heel to toe and will fit a centre shaft.

Standard mallet – To fit mallet and mid mallets up to 3.0” deep from face to back and 4” long from heel to toe.

Midsize mallet – To fit mallets up to 4” deep from face to back and 4” long from heel to toe.

Standard centre shaft mallet (round back) – As above.

Midsize centre shaft mallet (round back) – As above.

Square mallet- To fit putters up to 4” deep from face to back and 4.5” from heel to toe ie.™ Tour Spider.

Square centre shaft mallet – As above.

If your putter is an unusual shape/depth, please contact us for further guidance or for more information on our bespoke service.

Headcover Care Guide

- Always allow your headcover to dry out naturally.
- Never put your headcover in a washing machine and do not dry clean.
- Do not store your putter in a damp headcover.
- Leather and synthetic headcovers can be wiped clean using warm soapy water and a soft cloth allowing to dry naturally.
- Harris Tweed – Leave to completely dry naturally.